


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

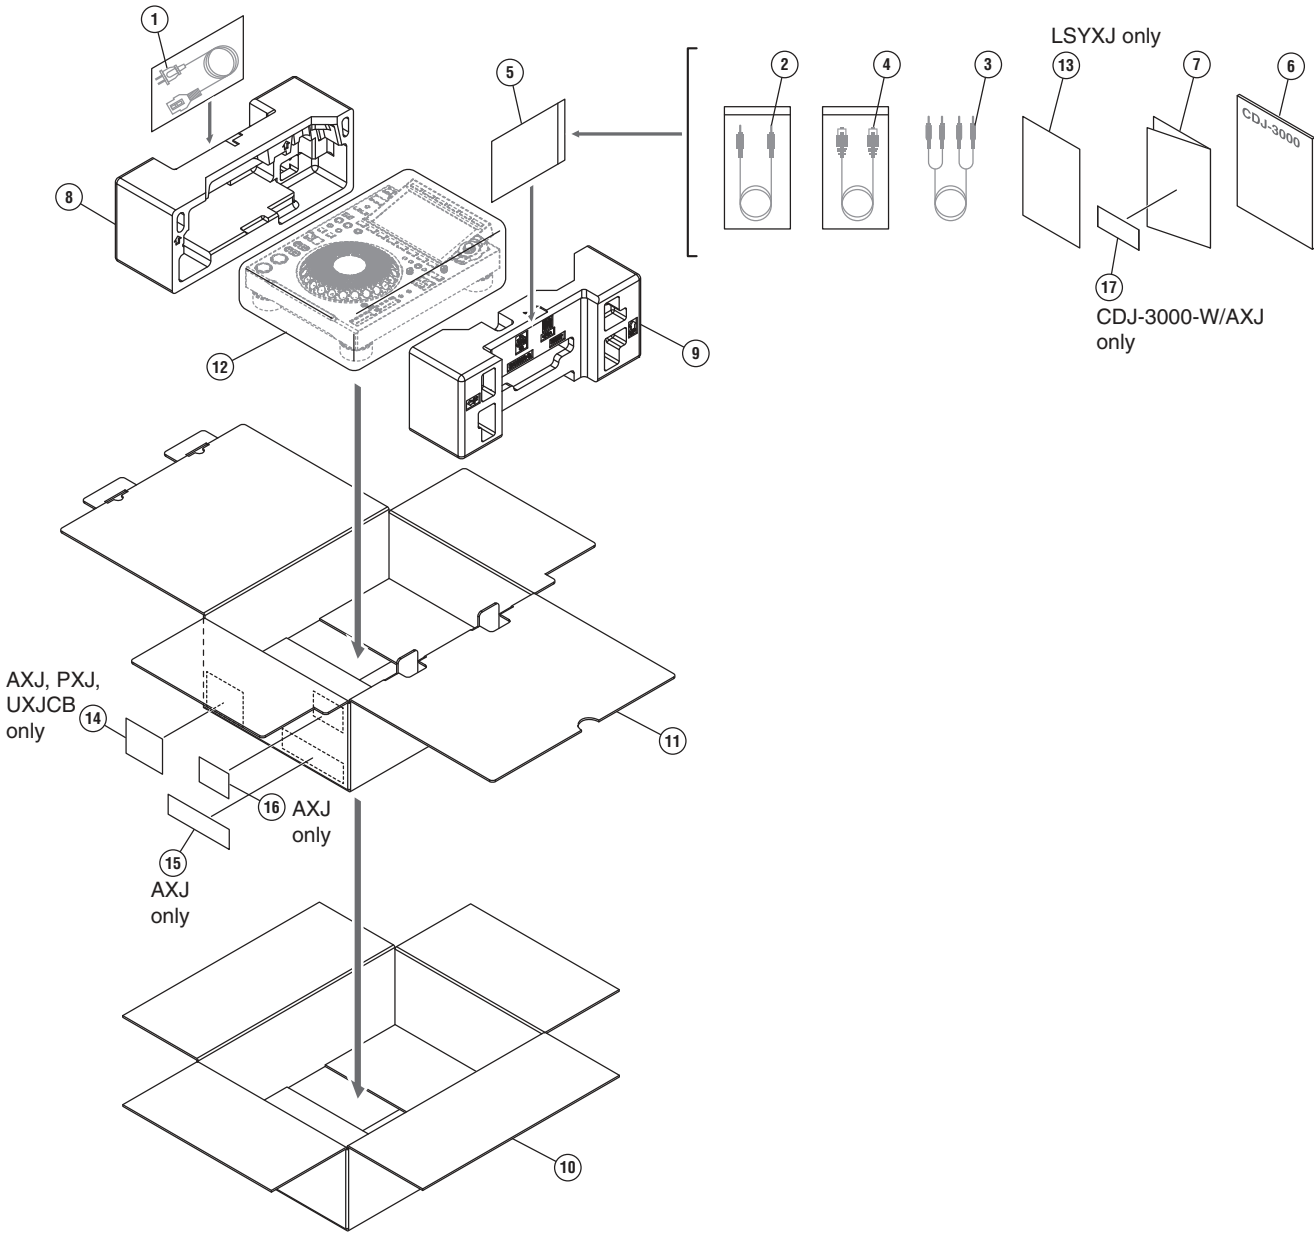

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	11	Packing Case	See Contrast table (2)
	2 Digital audio cable	DDE1154	12	Packing Sheet	RHC1023
	3 Analog audio cable	XDE3045	NSP 13	Warranty	See Contrast table (2)
	4 LAN cable	DDE1141	NSP 14	Label	See Contrast table (2)
NSP 5	Polyethylene Bag	AHG7117	NSP 15	Label	See Contrast table (2)
	6 Quick Start Guide	DRH1530	NSP 16	Label	See Contrast table (2)
	7 Precautions for Use	See Contrast table (2)	NSP 17	Label	See Contrast table (2)
	8 Packing Pad	DHA1997			
	9 Packing Pad	DHA1998			
NSP 10	Master Carton	See Contrast table (2)			


(2) CONTRAST TABLE

CDJ-3000/AXJ, LSYXJ, UXJCB, CDJ-3000-W/AXJ, PXJ, UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000 /AXJ	CDJ-3000 /LSYXJ	CDJ-3000 /UXJCB	CDJ-3000-W /AXJ	CDJ-3000-W /PXJ	CDJ-3000-W /UXJCB
⚠	1	Power cord	DDG1125	DDG1124	DDG1123	DDG1125	DDG1124	DDG1123
	7	Precautions for Use	DRH1535	DRH1534	DRH1534	DRH1535	DRH1611	DRH1611
NSP	10	Master Carton	DHG3763	DHG3697	DHG3764	DHG3808	DHG3806	DHG3805
	11	Packing Case	DHG3801	DHG3801	DHG3801	DHG3809	DHG3809	DHG3809
NSP	13	Warranty	Not used	DRY1274	Not used	Not used	Not used	Not used
NSP	14	Label	DRW2951	Not used	DRW2853	DRW2983	DRW2981	Not used
NSP	15	Label	DRW2952	Not used	Not used	DRW2984	Not used	Not used
NSP	16	Label	DRW2953	Not used	Not used	DRW2953	Not used	Not used
NSP	17	Label	Not used	Not used	Not used	DRW2988	Not used	Not used

9.2 CHASSIS SECTION

A • Bottom view

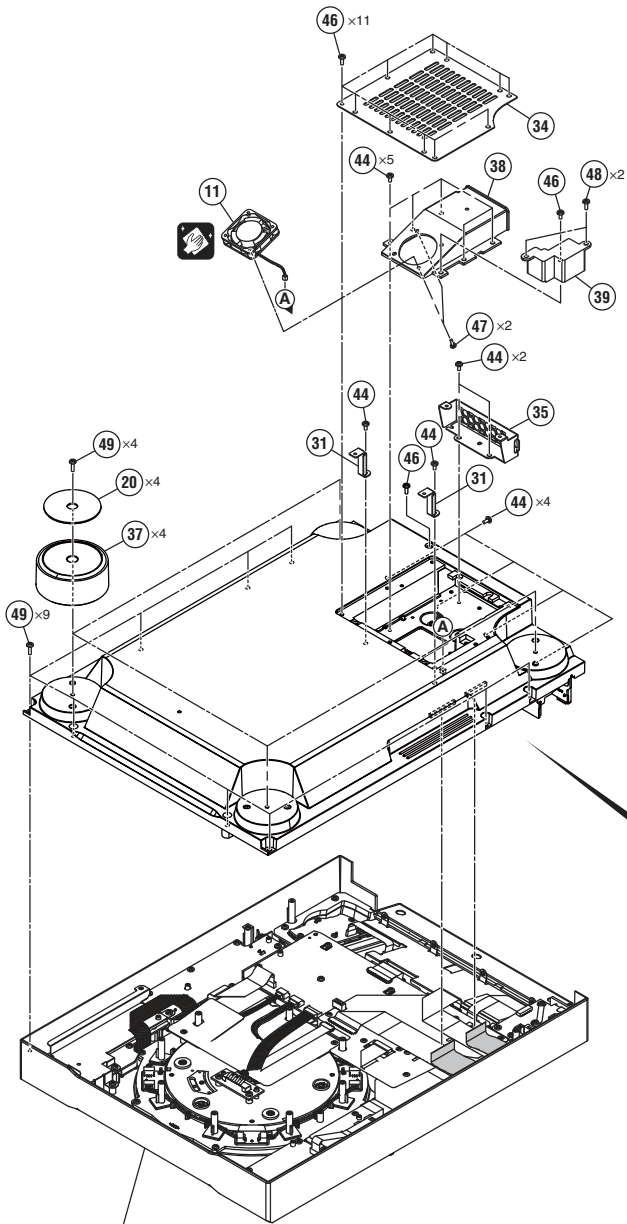



Refer to
"9.3 CONTROL PANEL (1/2) SECTION".

• Top view

Refer to "7. DISASSEMBLY"



Bond

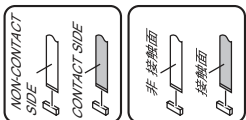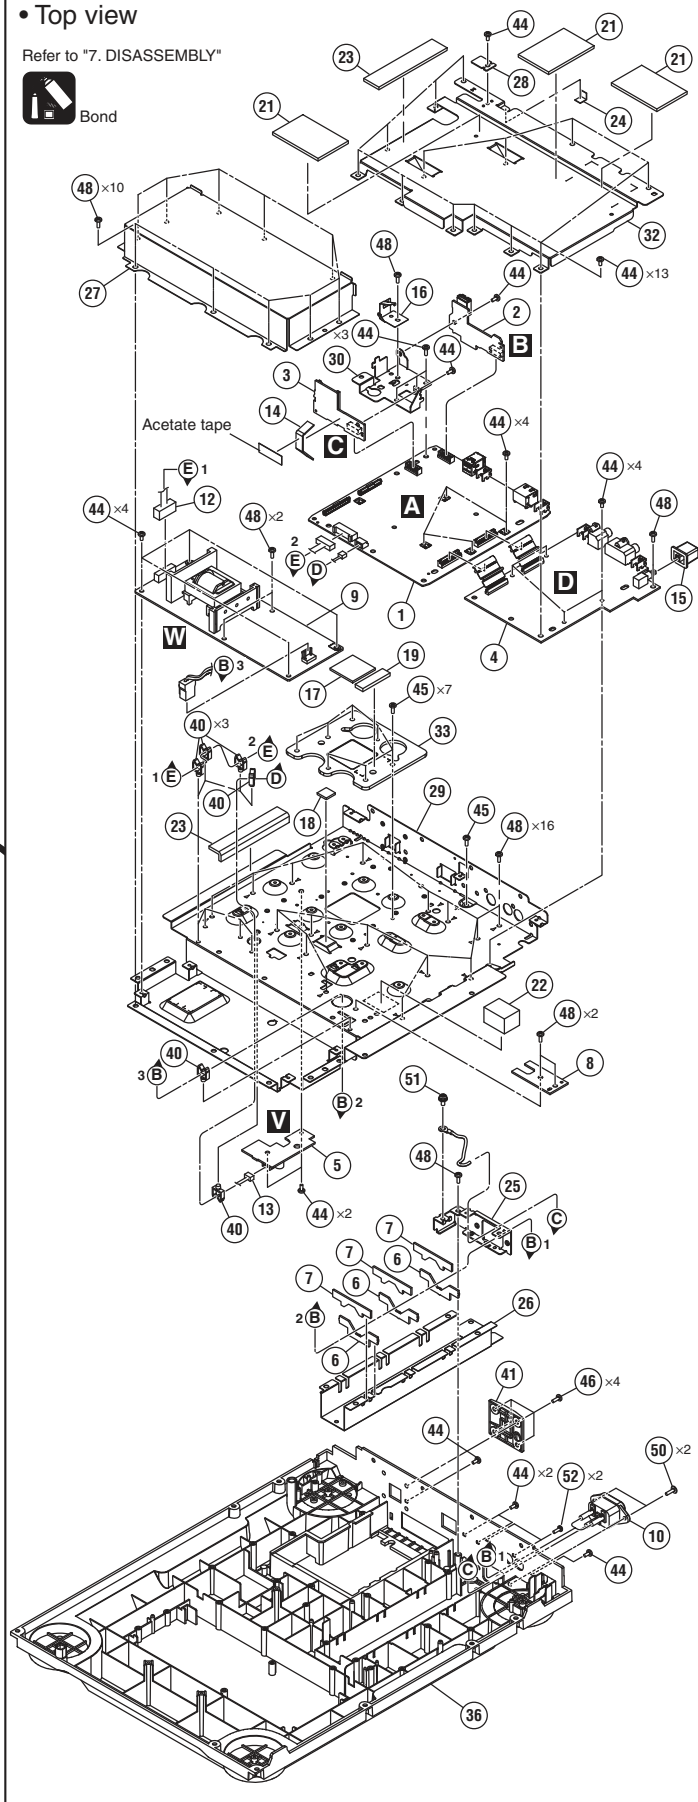

(1) CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN Assy	DWX4229	26	Shield Case	DNH3317	
2	USBA Assy	DWX4230	27	Shield Case	DNH3326	A
3	SDCB Assy	DWX4231	28	Stay	DNH3328	
4	AUDB Assy	DWX4278	29	Stay	DNH3408	
5	FANB Assy	DWX4267	30	Stay	DNH3409	
6	SSK1 Assy	DWX4327	31	Stay	DNH3410	
7	SSK2 Assy	DWX4328	32	Shield Case	DNH3415	
8	SSK3 Assy	DWX4329	33	Heat Sink	DNH3419	
⚠ 9	SW POWER SUPPLY	DWR1548	34	Cover	DNH3420	
⚠ 10	AC Inlet	DKP3991	35	Cover	DNH3421	
11	Fan Motor	CXM1446	⚠ 36	Chassis	See Contrast table (2)	B
12	Crimp Connector	DDC1024	37	Insulator	DNK6852	
13	Crimp Connector	DDC1030	38	Duct	DNK6854	
14	Ferrite Clamper	DTX1011	39	Cover	DNK6893	
15	Power Knob	DAC2306	40	Holder	VEC1355	
16	SD Earth Spring	DBK1357	41	Support	DNK6927	
17	Heat Cond Sheet	DEB2069	42	•••••		
18	Heat Cond Sheet	DEB2071	43	•••••		
19	Heat Cond Sheet	DEB2076	44	Screw	BBZ30P060FTB	
20	Cushion	DEC3838	45	Screw	BBZ30P080FTC	C
21	Cushion	DEC3884	46	Screw	BBZ30P080FTB	
22	Cushion	DEC3921	47	Screw	BPZ26P080FTC	
23	Cushion	DEC3923	48	Screw	BPZ30P080FNI	
24	Gasket	DEC3919	49	Screw	BPZ30P100FTB	
25	Bracket/ACI	DNH3020	50	Screw	IBZ30P100FTB	
			51	Screw	PMH40P080FTC	
			52	Screw	PPZ30P080FTB	

(2) CONTRAST TABLE

CDJ-3000 and CDJ-3000-W are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000	CDJ-3000-W
⚠	36	Chassis	DNK6851	DNK6984

9.3 CONTROL PANEL (1/2) SECTION

A



B

C




D

E

F

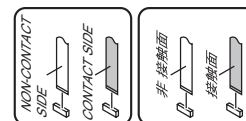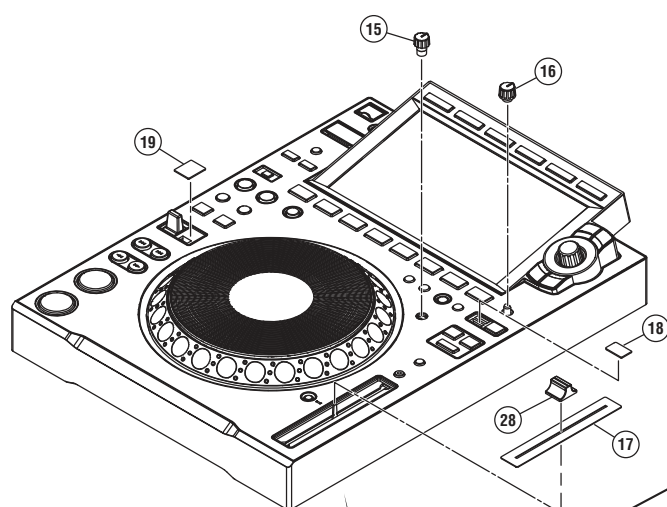

• Bottom view

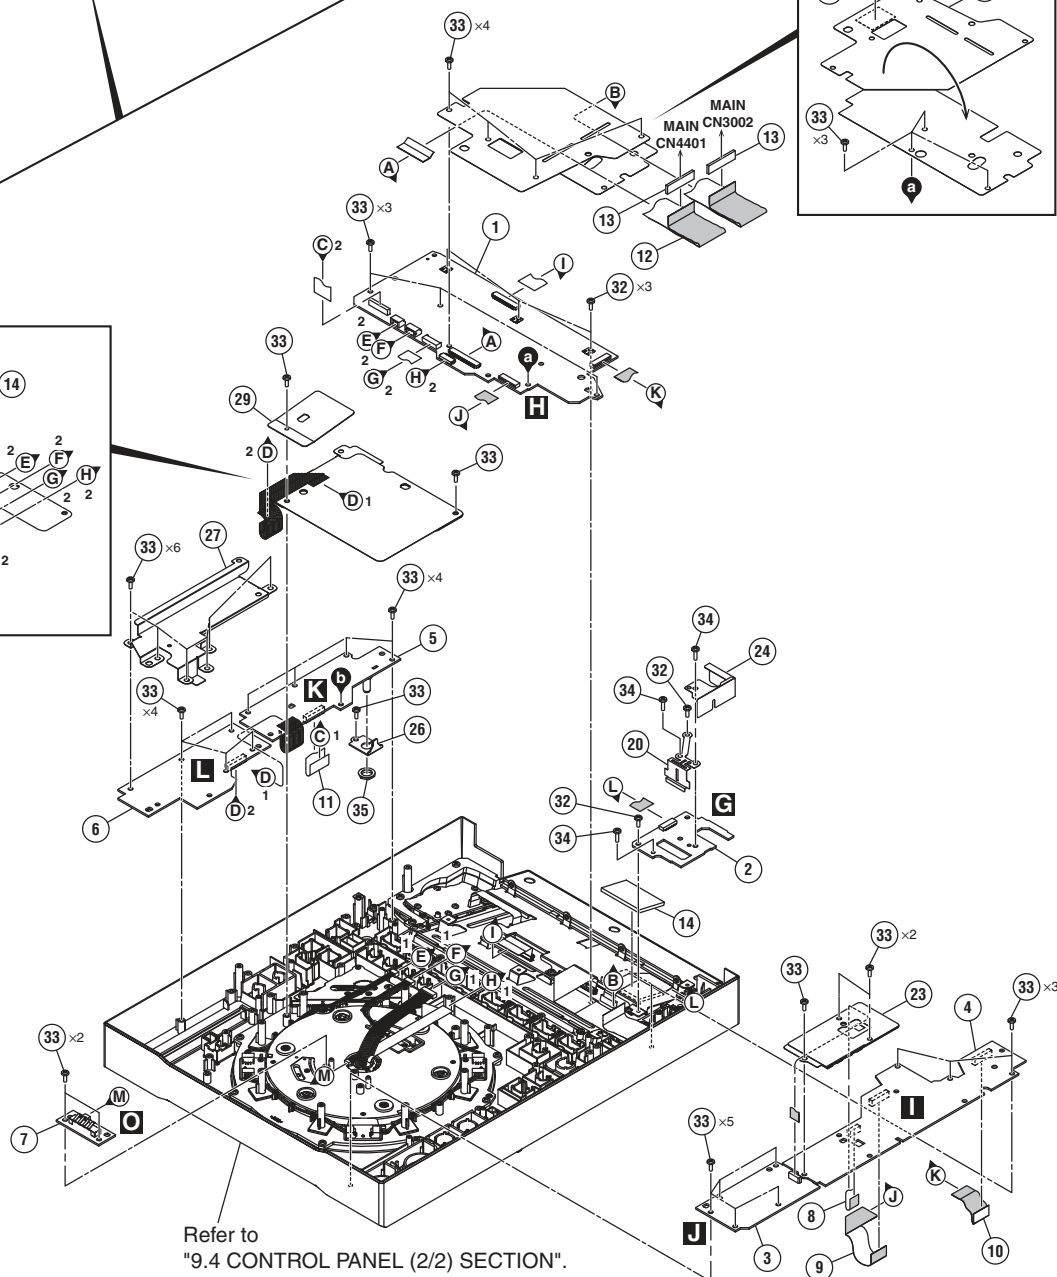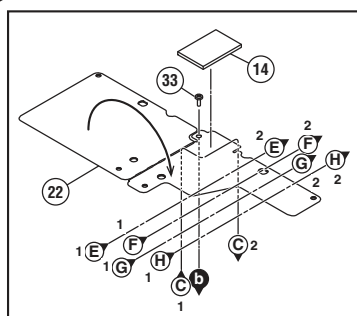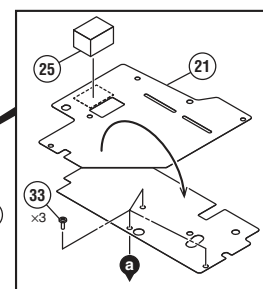

Refer to
"9.4 CONTROL PANEL (2/2) SECTION".

(1) CONTROL PANEL (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	PNLB Assy	DWX4256	21	Sheet	DEC3841	A
2	ILMB Assy	DWX4257	22	Sheet	DEC3842	
3	KSWB Assy	DWX4268	23	Sheet	DEC3927	
4	SUB1 Assy	DWX4264	24	Sheet	DEC3869	
5	SUB2 Assy	DWX4265	25	Cushion	DEC3921	
6	SLDB Assy	DWX4266	26	Stay	DNH3412	
7	CONB Assy	DWX4269	27	Shield Case	DNH3416	
8	FFC	DDD1914	28	Knob/SLD	See Contrast table (2)	
9	FFC	DDD1915	29	Barrier	DEC3932	
10	FFC	DDD1916	30	•••••		B
11	FFC	DDD1917	31	•••••		
12	FFC	DDD1921	32	Screw	BBZ30P080FTC	
13	Ferrite Clamper	DTX1011	33	Screw	BPZ30P080FNI	
14	Cushion	DEC3922	34	Screw	BPZ30P100FTB	
15	Knob	DAA1444	35	Flange Nut M9	DBN1008	
16	Knob	DAA1405				
17	Slide Sheet 1C	See Contrast table (2)				
18	Panel	DAH3257				
19	Panel	DAH3256				
20	Leaf Spring	DBK1386				C

(2) CONTRAST TABLE

CDJ-3000 and CDJ-3000-W are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000	CDJ-3000-W
	17	Slide Sheet 1C	DAH2404	DAH3193
	28	Knob/SLD	DNK5981	DNK6188

9.4 CONTROL PANEL (2/2) SECTION

A • Bottom view


Refer to "7. DISASSEMBLY"




Lubricating oil

Refer to "9.6 JOG DIAL SECTION".

Refer to "9.5 DISPLAY SECTION".

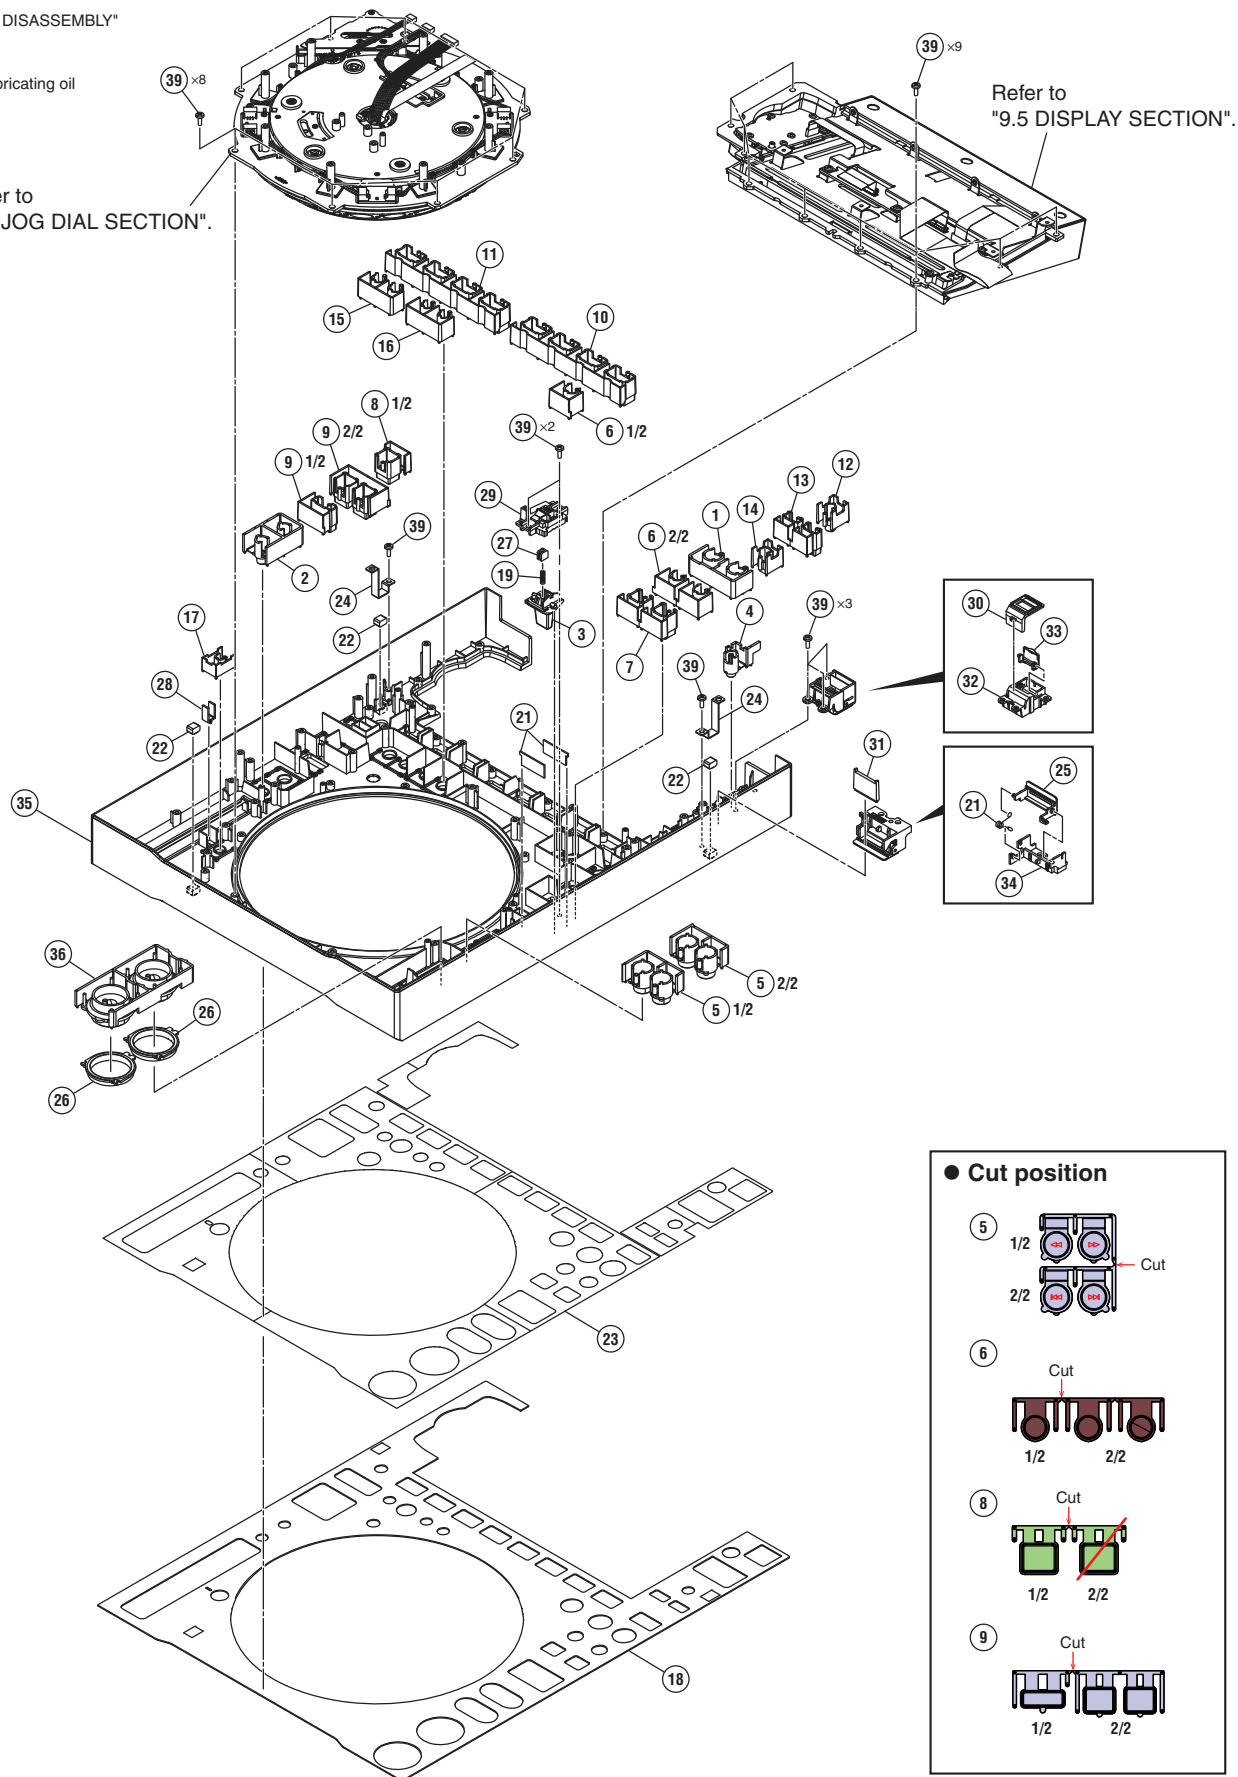

● Cut position

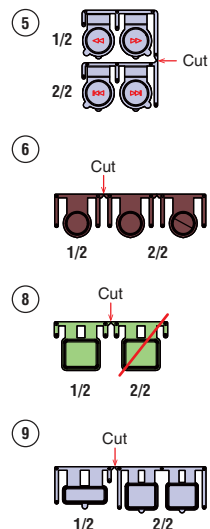

	5		6		7		8	
(1) CONTROL PANEL (2/2) SECTION PARTS LIST								
Mark No.	Description	Part No.	Mark No.	Description	Part No.			
1	Button (LOOP)	DAC2470	21	Brake	DEC3948			
2	Button (TEMPO)	DAC2474	22	Gasket	DEC3719			A
3	Lever	DAC3097	23	DS ADH Sheet	DEH1107			
4	Button	DAC3134	24	Stay	DNH3413			
5	Button	DAC3149	25	SD Card Door	DNK5308			
6	Button	DAC3463	26	Ring Lens (PLAY)	DNK5315			
7	Button	DAC3464	27	Lever Cap	DNK5344			
8	Button	DAC3465	28	Lens	DNK5862			
9	Button	DAC3466	29	Base	DNK6470			
10	Button	DAC3467	30	Lens	DNK6931			
11	Button	DAC3468	31	Lens	DNK6937			B
12	Button	DAC3469	32	Holder	DNK6496			
13	Button	DAC3470	33	Door	DNK6497			
14	Button	DAC3472	34	Holder	DNK6498			
15	Button	DAC3474	⚠	35 Control Panel	See Contrast table (2)			
16	Button	DAC3475	36	Button Unit	See Contrast table (2)			
17	Button	DAC3476	37	•••••				
18	Panel	See Contrast table (2)	38	•••••				
19	Lever Spring	DBH1702	39	Screw	BPZ30P080FNI			
20	Spring	DBH1717						C




(2) CONTRAST TABLE

CDJ-3000 and CDJ-3000-W are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000	CDJ-3000-W
⚠	18	Panel	DAH3258	DAH3329
	35	Control Panel	DNK6856	DNK6971
	36	Button Unit	DXB2197	DXB2210

9.5 DISPLAY SECTION

• Bottom view

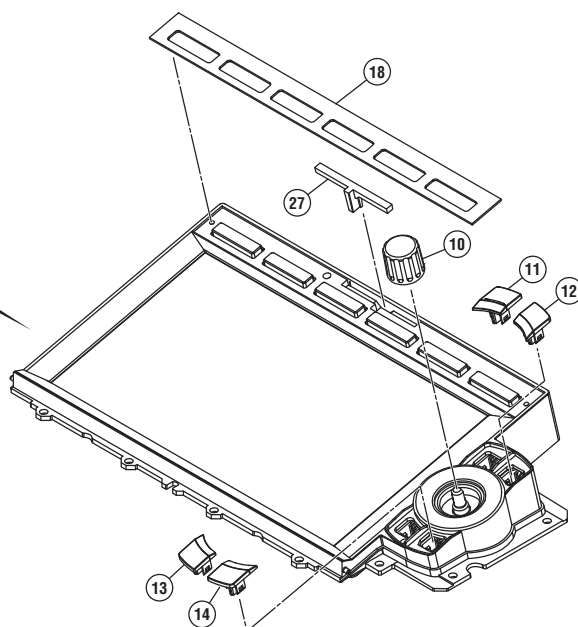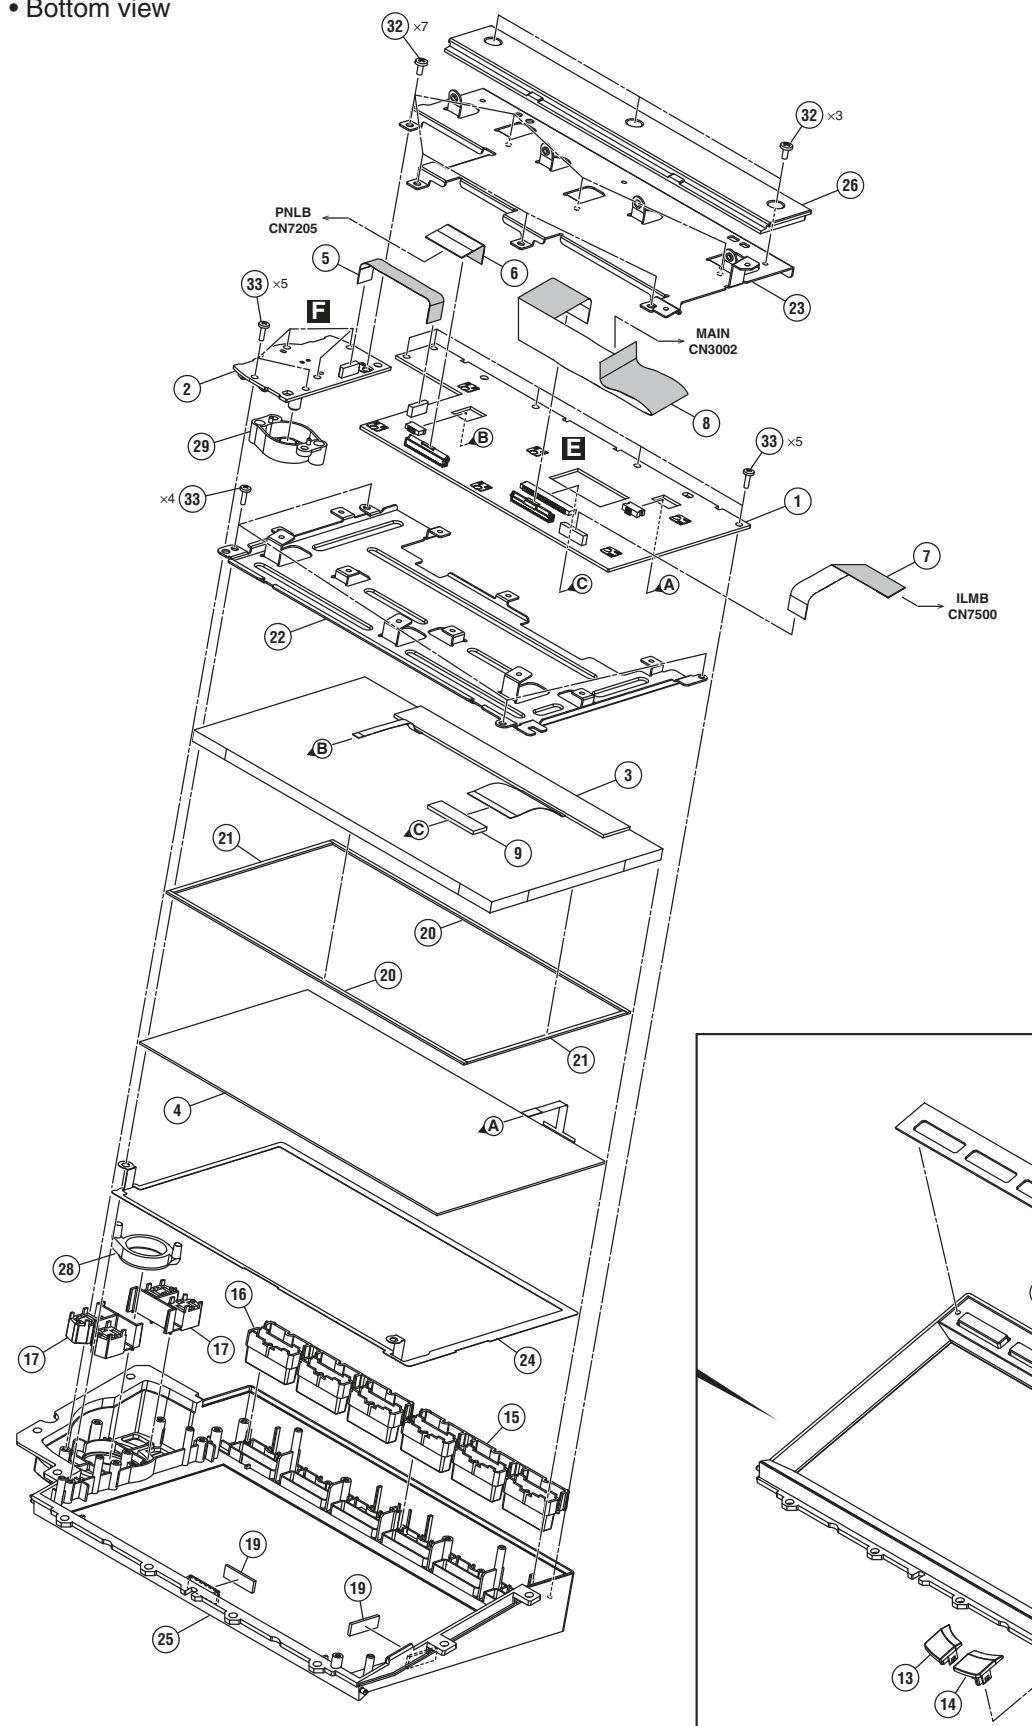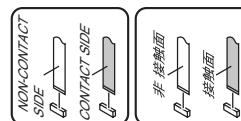

(1) DISPLAY SECTION PARTS LIST



<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MLCB Assy	DWX4281	16	Button	DAC3462
2	ENCB Assy	DWX4326	17	Button	DAC3460
3	TFT LCD	DWX4227	18	Panel	See Contrast table (2)
4	Touch Panel	DSX1145	19	Packing/LCD	DEC3565
5	FFC	DDD1918	20	Cushion	DEC3839
6	FFC	DDD1919	21	Cushion	DEC3840
7	FFC	DDD1920	22	Stay	DNH3411
8	FFC	DDD1922	23	Shield Case	DNH3417
9	Ferrite Clamper	DTX1011	24	Plate	DNH3422
10	Dial Knob	See Contrast table (2)	25	Control Panel	See Contrast table (2)
11	Button	See Contrast table (2)	26	Cover	DNK6857
12	Button	See Contrast table (2)	27	Lens	See Contrast table (2)
13	Button	See Contrast table (2)	28	Lens	DNK6859
14	Button	See Contrast table (2)	29	Holder	DNK6860
15	Button	DAC3461	30	•••••	
			31	•••••	
			32	Screw	BBZ30P060FTB
			33	Screw	BPZ26P080FTC

(2) CONTRAST TABLE

CDJ-3000 and CDJ-3000-W are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000	CDJ-3000-W
	10	Dial Knob	DAA1246	DAA1399
	11	Button	DAC3457	DAC3565
	12	Button	DAC3459	DAC3567
	13	Button	DAC3485	DAC3568
	14	Button	DAC3458	DAC3566
	18	Panel	DAH3259	DAH3331
	25	Control Panel	DNK6855	DNK6972
	27	Lens	DNK6858	DNK6985

A

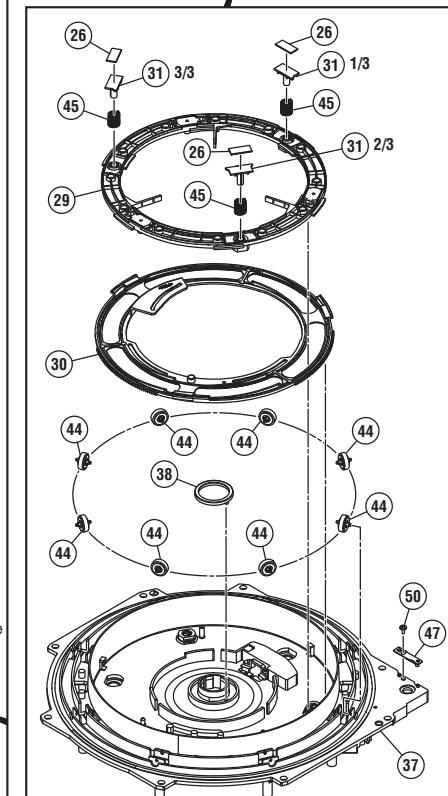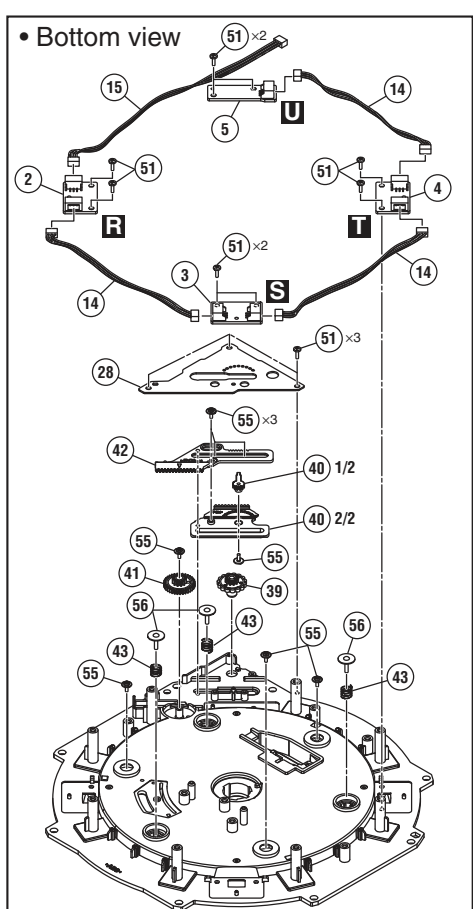

(1) JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	JLCD Assy	DWX4255	31	Base	DNK6776	
2	JILM1 Assy	DWX4258	32	Jog Dial	DNK6777	A
3	JILM2 Assy	DWX4259	33	Jog Dial	See Contrast table (2)	
4	JILM3 Assy	DWX4260	34	Base	DNK6779	
5	JILM4 Assy	DWX4261	35	Holder	DNK6780	
6	COIL1 Assy	DWX4262	36	Holder	DNK6782	
7	COIL2 Assy	DWX4263	37	Holder	DNK6784	
8	JOGB Assy	DWX4270	38	Shaft	DNK6785	
9	Sensor	DSX1139	39	Gear	DNK6786	
10	FFC	DDD1913	40	Gear	DNK6787	
11	Crimp Connector	DDC1032	41	Gear	DNK6788	B
12	Crimp Connector	DDC1033	42	Gear	DNK6789	
13	Crimp Connector	DDC1034	43	Spring	DBH1816	
14	Connector Assy	PF03PP-B12	44	Roller	DXB2178	
15	Connector Assy	PF03PP-B17	45	Spring	DBH1817	
16	Connector Assy	PF04PP-C10	46	Damper	DEB2083	
17	1..LCD Service Assy	DEA1122	47	Leaf Spring	DBK1394	
NSP 18	2..TFT LCD		48			
NSP 19	2..Cover		49			
NSP 20	2..Holder		50	Screw	BPZ20P040FTB	C
NSP 21	2..Sheet		51	Screw	BPZ20P060FTC	
22	SW Cushion HH48/2	DEC2538	52	Screw	BPZ30P080FNI	
23	Slit	DEC3589	53	Screw	IPZ20P080FTC	
24	Cushion	DEC3807	54	Screw	IPZ20P060FTC	
25	Window	See Contrast table (2)	55	Screw (FE)	DBA1265	
26	Brake	DED1189	56	Float Fastener	DBA1286	
27	DS Tape	DEH1111				
28	Cover	DNH3367				
29	Base	DNK6774				D
30	Cam	DNK6775				

(2) CONTRAST TABLE

CDJ-3000 and CDJ-3000-W are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000	CDJ-3000-W
	25	Window	DAH3206	DAH3330
	33	Jog Dial	DNK6778	DNK6973